


## Inflation


1. Please ensure lithium battery pump is charged fully before placing in the vehicle. Charge again at least once a month and each time after use.
2. Always keep your **Rigloo** close to hand in the event you must exit your vehicle at speed. Keep in the front footwell or rear seat if you have a passenger.
3. When your vehicle has stopped, exit using the left side away from moving traffic taking your **Rigloo** with you.
4. Get behind a barrier asap, preferably make your way to the top of the verge and into a field if available to do so.
5. Unpack your **Rigloo** and roll out flat.
6. Attach Tether anchor cord to a fence, tree or use a peg provided to ensure the Rigloo is well anchored.



7. Check that both Valves (1 at each door) are fully secured in the closed position before preparing to inflate.

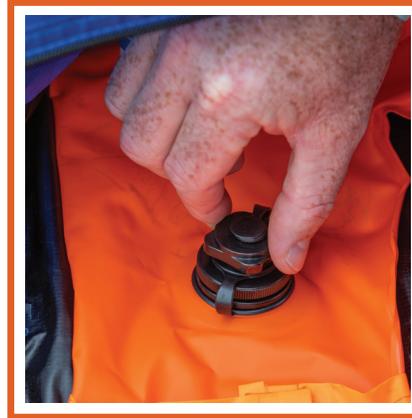

8. Open selected inflation point valve and attach the pump using the nozzle provided.

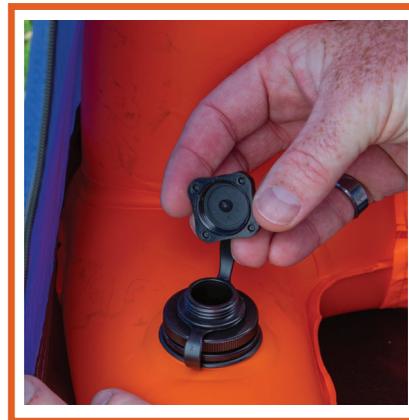

9. Switch pump to the on position and allow to inflate. Assist the inflation by lifting the shelter from the top to allow the air to flow. This should take no longer than 90 seconds.
10. Peg out the 6 external points of the groundsheet inserting the pegs at 45\* towards the shelter.

11. Climb inside the shelter and check for any twists in the Airframe.

12. If top up is required (most of the time) open the second valve to inflation position and attach the manual pump and begin to pump, fully extending and retracting the pump as you inflate your **Rigloo**. This will allow any twists to straighten out and your **Rigloo** will pop right up into its shape.

13. Once the **Rigloo** is at an acceptable pressure to maintain its structure, remove both pumps (if required) and close both valves fully.

14. Utilise the [what3words](#) app if possible, to locate your exact position and call the emergency services or your breakdown service provider.

15. Remain vigilant whilst waiting to be rescued by looking out of the windows provided to keep your eye on traffic if it is still within view.



Utilise the free what3words app\* if possible, to discover a 3 word identifier for your exact location and call the emergency services or your breakdown service provider.



\*Scan to download the free whatwords app.

## Deflation

1. Once emergency services have indicated they are ready to allow you to continue your journey please exit the Rigloo and fully open one or both valves, the Rigloo will deflate instantly.



2. Remove the ground pegs and guy ropes if you have used them.

3. Roll the Rigloo up roughly towards the tethered end.

4. Remove the tether and bundle the Rigloo into the vehicle to be folded and repacked at home once it has been fully dried.

## Repacking

1. Inflate your Rigloo at home and allow to fully dry before repacking.

2. For repacking please see online tutorial via [Rigloo.co.uk](http://Rigloo.co.uk)

3. Deflate Rigloo completely.

4. Fold across the short side twice (roughly 40 cm folds) pressing out air as you do so.

5. Once Rigloo is folded into one long strip, close fully the valve at the end you will be folding first.

6. Fold from closed valve end to the other about 30 cm each fold and expel the air as you do so.

7. Take the tether and wrap it around the folded Rigloo to keep it in place before carefully slipping your Rigloo back into the bag.

8. Make sure your battery pump is fully charged before placing back into bag along with the manual top up pump and the accompanying pegs and ropes.

9. Place back into your vehicle at the closest point for retrieval.

10. Rest assured you are now, once more, Rescue Ready!

Address: The Studio, 21 North Back Road,  
Biggar, ML12 6EJ

Phone: 0141-291-5021

Email: [info@rigloo.co.uk](mailto:info@rigloo.co.uk)



[www.rigloo.co.uk](http://www.rigloo.co.uk)



For more information  
contact Rigloo Now!



# Rigloo Instructions



## Be Rescue Ready

